

Digicon

OPERATING MANUAL Automatic Audio Broadcaster SBT-19.01



www.digicon-systems.com

USER MANUAL

Thanks for Purchasing "THE BEST"

Please read this document carefully to set and operate your device properly.

In general two settings are mandatory to operate the device in automatic mode.

1– Profile Setting.

2 – Schedule Setting.

Your *Intel* powered devices have too many advanced features. A brief features details are listed below!

- 6- Standard Time Profile (summer, winter, Examination, Customized, Summer Half-Day, Winter Half-Day).
- Weekly Scheduled Setting (Each Day of Week Can Be Set In Different Mode).
- Yearly Holiday Setting: Each And Every Day Of Year Can Set As Off Day / Holiday or usual day, there is No Limit of Days to Be Set As Holiday.
- Weekly Off Day Setting: Any Day Of Week Can Be Set As Weekly Off Day.
- Weekly half day: any day of week can be assigned as weekly Half-day.
- Automatic Timeout Feature to come out from setting mode to normal mode if unattended for a short while.
- Manual Audio Message Broadcasting.
- External Micro-SD Card To Set And Play Desired Audio Files.
- Support Mp3/WAV Audio Format.
- Device Can Be Reset To Factory Default Condition.
- DAO (Digital Audio Out) Digital Volume Control.
- Smart Warranty Feature: The Device Have Smart Warranty Feature, Device will detect the real use of the day and update the warranty date.
- Smart Serial: Every Device Have a unique Serial Number.
- Automatic Power management for Attached Audio Amplifier, (Automatic power On for Audio Amplifier during Audio Broadcast.)

The detailed Setting of each and every step is given bellow! Please read the document carefully, and keep this manual in safe place for future reference, a soft copy can be found on www.digicon-systems.com

HOME SCREEN



There is two operation's are possible

1. MANUAL PLAY

Manual mode: For broadcast bell manually. Press 'MANUAL' key when Device is at Home Screen. ENTER PASSWORD Screen appears, Enter password to precede, Factory default password id "0000", A next window appears asking for file number to be played?? Key the file number by using keypad 'like 01/ 02/ 12/ 15/ 99 to broadcast the Message or play the bell file.

Note: Auto play mode won't work until Device is playing in Manual Mode. Device will roll back to Auto-mode after playing the file.

SETTING MODE: PROGRAMMING THE UNIT FOR AUTOMATIC OPERATION:



The above window shows Common setting options.

Press **1** for Device time setting

Press **2** for Day & Date Setting

Press **3** to change the current password of the Device.

Press **4** to enter in System setting mode.

The details of each setting are given bellow!

1-TIME SETTING



The time setting screen will look like this, please enter valid time hour and minute value in (24 hour format).

After successful setting, device will back to setting mode menu. If further settings not needed, please press setting to go back to home screen.

2-DAY & DATE SETTING



After selecting option date setting (Calendar Setting) day setting screen appears like above image, please press corresponding number, like for Monday select 1, for Tuesday select 2, for Saturday press 6 likewise.

After successful selection next screen will appear for current date setting the screen will look like this.

DATE SETTING



Please enter current date, month number, and year value in dual digit format. Wrong value/entry not accepted.

After successful setting device will back to setting mode menu!

If further settings not needed, please press setting to go back to home screen.


3- PASSWORD SETTING



Here on password setting screen User may change new system password, password should be combination of four digit numbers. After successful setting, device will back to setting mode menu. If further settings not needed, please press setting to go back to home screen.

3- SYSTEM SETTING

Having entered in setting menu, screen will look like bellow!



These two settings are mandatory to operate the device in Automatic mode, the first "Profile Setting" lead to set time profiles, these time profiles are Time Table, containing Automatic message broadcasted time and which MP3 file will play on that time. Each and every profile has its associated memory space.

The details of both settings are given bellow!

To select profile setting pls. press key '1', device informed that we are going to profile setting menu, the next screen will look like that.



Above screen display the short name of 6 time profiles

- 1- Sum= Summer Time Profile.**
- 2- Win = Winter Time Profile.**
- 3- Exm= Examination Time Profile**
- 4- Cus= Custom Time Profile**
- 5- HdS= Half Day Profile for Summer Season.**
- 6- HdW=Half Day Profile for Winter Season.**

User may select any profile for setting, method of settings method for all profiles are same, each profile have own separate memory location so editing or setting one profile will not affect to another profile.


Each profile needs to set as per season time table, for example if we select Summer Profile to set; we have to press associated key number For summer profile, its key '1', next screen will appears.



The first line of this screen shows information, while second line shows operational options, the most left two digit of first line is serial number and ??:?? (Questioning marks) are space for time information in hour and minute. If your device has pre-stored time information, that will display there. ??:?? Means no information is saved before. To store time for first audio message to be broadcast select "Edit" option (press key 1). Cursor will be live, please fill the Hour and Minute details for first Bell/Audio Message. After filling the time details cursor will automatically move next to File is asking file number to be played on your entered time?? Please look further page of this leaflet to know the file number for associated audio messages. After entering the desired file number, information will be automatically saved, and next serial number will appears to store next bell/ Audio message information, like that user may set maximum 30 bell/Audio Messages information in each profile. Which is enough/fit for two shift school or factory, If user make any wrong entry during profile setting, please don't worry there is no option to go back, so please keep continue to fill next bell information, after finishing all bell/ audio message

information please come back to same menu, & verify and edit previously entered data. If user need to exit from this menu simply press setting to come out from this profile setting menu. User may set all remaining profiles in same manner.

After successfully profile setting the previous screen will appears.



Now user need to set another important setting Schedule Setting.

SCHEDULE SETTING

The Schedule Setting has two parts.

- 1- WEEKLY SCHEDULE SETTING.**
- 2- ANNUAL HOLIDAY/NORMAL DAY SETTING.**

WEEKLY SCHEDULE SETTING

After selecting first option device entered into "Weekly Schedule Setting" mode, Screen displays a message to select weekly off day.



Next screen appears shortly asking to select Weekly off day.



The screen will display the short name of week's day in first line of display, while the respected day number will be display in second line, please press key number for respected day to select weekly off day, after successful setting device will display a saved day for a while, for example if user press key number "7" device will display verification message like this.



After success full setting, the next part of weekly setting begins. Display will look like bellow!



In this setting menu, users will assign profiles for week day, For example user may assign MONDAY as Summer/Winter/Examination/Custom/Summer Half-day or Winter Half day, respected keys are "1" to "6". Profiles names are already mentioned on keypad. Here no need to care for off day/holiday, its round robin (Universal/Common setting) for every week of year. User may assign holidays in annual holiday setting section. After successful setting, Device will move to home screen.

ANNUAL HOLIDAY

Annual holiday is the second part of Schedule setting, User may reach to this setting followed by *HOME-SCREEN->SETTING->4-SYSTEM SETTING->SET SCHEDULE-> ANNUAL HOLIDAY*.



In the setting user may set annual holiday or change the status of holiday to normal day, for easy operation annual holiday setting will be saved by month by month. Any random month may be selected and assigned for holiday setting.

In the next screen device will ask to select desired month, to set or edit for holiday,



User may start selecting January or current month. Please enter month number in two digit format. For example if user press "01" means January month, the next screen will appears and look like this.



In this screen the first line indicated month name (JAN) and date (01) and next status of that date (USUAL DAY) means normal day.

The summery of this line is that the "01 JAN" a NORMAL day.

Here second line of screen, shows operational keys and action.

If user needs to change the status of JAN-01, users have to press key '1' if user is agree with the current status of that date, user may skip that date and simply go to next date by pressing key '2'.

Like that device will Display start to last date of selected month,

Each and every day of month can be set or reset for holiday,

Or read the status of selected month for pre-set holidays. The date assigned as holiday will be silent day, and device will not ring that day,

If user wants to exit from setting process, during setting, simply press setting key to exit from this setting menu.

After success fully setting the holiday data for selected month

The next screen will came in front like this.




Now if user needs to set holiday for next month user may select option1 by pressing key '1'. Or select option 2 to exit from setting menu now device will back to home screen,

If user selected option 1 user will be back to holiday setting menu, all process will be same as mentioned above lines.

Note: Common setting ends here. Thanks.

For some additional settings and system configuration please read next pages,

SYMBOLIC CONNECTION DIAGRAM

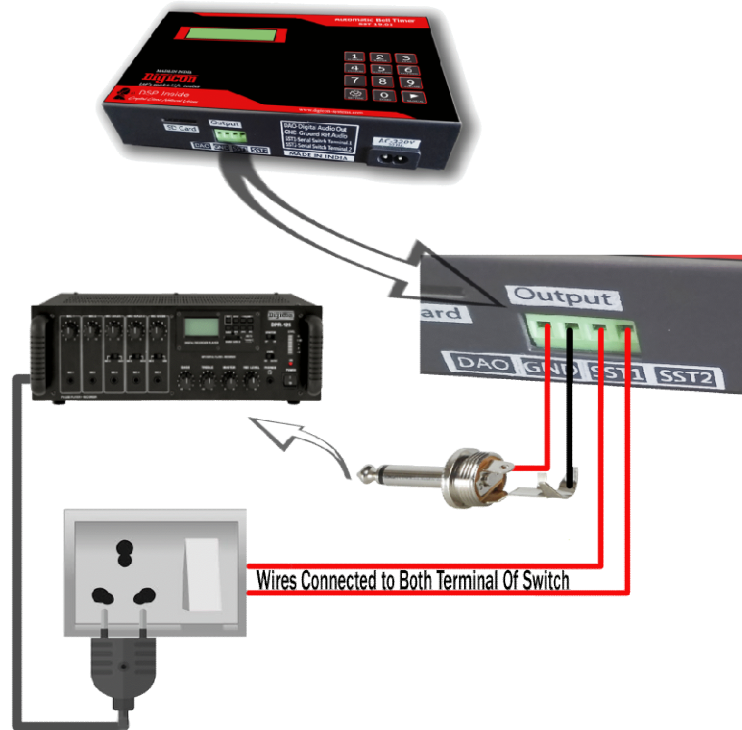

(Connection diagram) Automatic power management of Audio Amplifier

FACTORY RESET DEVICE.

To soft reset the device for factory default configuration, please follow instructions mentioned below!

1. Switch off the device.
2. Press and keep hold Manual key.
3. Switch on the device, keep hold manual key till a single beep.
4. Release the Manual key. Screen will display a new menu like image below.



If need to reset the device press '1'.

Caution: All setting will be lost (Including Profile and Schedule Settings). Annual Holiday will not be affected.

The Reset Process will start like this.



This process will take 60 seconds approximately,



A visual bar will increased till finished the whole process.

After resetting the device user need to set the device again for proper Use.

DAO LEVEL SETTING (Volume Setting)

User may set Audio Output Intensity of device if the Audio level overloads on the input impedance of audio amplifier. That cause distorted sound quality. To get a better sound quality, user need to adjust the audio out level of the device,

For that please follow instructions given.

1. Switch off the device
2. Press key '9' (VOLUME) and keep hold it.
3. Switch ON The device, after a beep release the Volume Key,

A Volume adjust menu will appears.



Please enter preferred volume level value to be set, this level will be set for ever, till you not change again. Power on/off not affect this setting. Recommended volume level is '10', the factory default volume level is '18' to match any brand of Audio Amplifier.

After entering the value in (two digit format) Device, it will back to home screen.

UPLOADING AUDIO FILES TO MICRO-SD CARD

Just follow following steps:

1. Switch OFF the device power supply from Power ON/Off switch.
2. Open the system cabinet.
3. Push Micro-SD card to unlock it and slowly pull that out of the slot.
4. Mount the Micro-SD card on some card reader and upload your desired sound files into it.
5. Always remember the sequence of files in which you upload them in Micro-SD card, so that you can select correct file number while programming.

6. The SD card will read the copied files in Time Indexed Manner, Means the file copy first will be first number, And copy after that will be second number. There is no-meaning of serial number of file. So first short by name and copy them to SD card.
7. Mount Micro-SD card to the device and push to lock the same.
8. Switch ON the power supply from Power ON-OFF Button.

For further assistance: write us:

digicon-systems@outlook.com

mail@digicon-systems.com